
User Manual

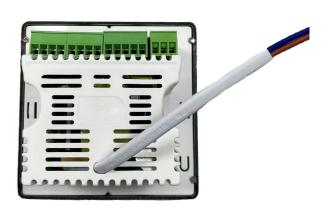





















In order to use the host quickly and correctly, please read the user manual carefully before use and keep the manual properly.

Note: The appearance of the product and the picture of the main interface of the system are for reference only. Please refer to the actual product for details.

Before the speech

Thank you choose our company intelligent background music controller host, the company all products are through strict test, before they go out, the quality of word smart host background music controller is widely used in high-end residential, villas, senior clubs, hotels, and other places of music, is that you choose intelligent background music controller host's ideal choice, for the convenience of installation, debugging and use of this product, you auspicious fine, please read this manual before installing, debugging.



Host function Description:

- 1.Audio format: support MP3, WAV, WMA, FLAC, APE, DTS, AAC, AC3, OGG and other audio formats, support LRC lyrics display.
- 2. Video format: Supports MPEG-1/2/3/4, RM/RMVB, WMV, MOV, MK, VOB, AVI, 3GP, H.264 and other video frames.
- 3. Radio functions: built-in full digital automatic FM radio, 30 stations save.
- 4. Bluetooth function: It supports pairing of external Bluetooth devices such as mobile phones to realize audio playback.
- 5. external audio input: support external audio source input machine, amplify output.
- 6. Time calendar: It supports clock and calendar display functions.
- 7. Setting function: Support switching between Chinese and English; Set the screen saver on and off; Set the brightness of the backlight lamp; Set whether to play music on power; Set the boot volume; Set the time; Bluetooth name; Bluetooth password; Time clock time play; Software version; Set to restore factory Settings.
- 8. Memory card function: TF card can be plugged in, and the maximum support is 32GB TF card.
- 9. Storage function of USB flash disk: external usb flash disk can support up to 32GB USB flash disk.
- 10. Multiple cyclic play modes: support single play, random play, sequential play, single cycle, and all cyclic play modes
- 11. Timed power-on function: five files are timed power-on, with humanized operation. The music is automatically played when the machine is started, and the specified music is played regularly.
- 12. Timed shutdown function: power off at any time in five gears.
- 13. Volume adjustment: level 20 electronic volume adjustment function.
- 14. Power off memory function: remember the state played before the last power off.
- 15. Screen saver display time function: After setting the screen saver, the screen saver can display time.
- 16. Infrared remote control function: provide a variety of shortcut keys and humanized operation.
- 17. Doorbell trigger: Support external doorbell trigger function.
- 18. Local music can be played on power.
- 19. Support linkage trigger to play specified music.



List:

The name of the	The number of	note	
Background music console	1	V	
The instructions	1	V	
Warranty card	1	V	
Install the screw	1	V	
Install the cartridge	1	V	
The remote control	1	V	
Hi-fi top suction horn	2	On-demand matching	
Memory card	1	On-demand matching	
Tuning switch	1	On-demand matching	
Audio line	1	On-demand matching	

Host parameters:

The power supply		110\	V-250V	load	4-8OHM
The output power	4x25W(AMX)		Audio signal to noise ratio		≥98dB
Frequency range	87.5-108MHz		Infrared remote control range		10M
Infrared remote control range	10M		Product size		86*86*10mm

The company will continue to improve the performance of the products, design specifications are subject to change, without prior notice.

Matters needing attention:

- 1. This host is suitable for the use of AC90-250 power supply, please install and debug under the guidance of professionals.
- 2. Please read this manual carefully and strictly follow the installation instructions.
- 3. Please check the terminal post carefully for the speaker line, power line and audio source input line.
- 4. Please turn off the main power switch when the host machine is not used for a long time.



Installation and disassembly instructions:

- 1. Embedded 86 bottom box with a depth of 57MM.
- 2. Wires used in this product: multi-strand copper wire, coaxial wire, audio wire and audio wire.
- 3. Please consult the supplier when installing the machine.
- 4. Do not repair the machine without authorization. If it needs to be repaired, please consult the

supplier for professional maintenance.

Description of functions:

1, music

After inserting TF memory card or USB flash drive, click the music icon and press "ok" to enter the local music playing mode. In the local music interface, you can select songs from the song list to play, the previous song, the next song, pause the play, volume and other functions.

2, the movie

After inserting TF memory card or USB flash drive, click "Confirm" to enter the local video mode. In the local video interface, you can select the video playback from the video list, the previous one, the next one, pause the playback, volume and other functions.

3, Radio

Click the radio receiver icon to enter FM radio mode. Short press "Ok" button will pop up the function bar. Through the function bar, you can choose to automatically search the radio channel, manually search the radio channel, and fine-tune the frequency point channel and other functions.

4, bluetooth

Click the Bluetooth icon and enter the Bluetooth mode. The mobile phone and other Bluetooth devices search for the name of BGM_000 and the pairing name of 1234, and then connect with the host. After successful connection, the host will send the sound of successful connection



5. AUX

TV and other audio equipment are connected to the host through audio cable. Click AUX icon and enter AUX mode to output TV and other audio equipment to the host for playing.

6. The clock

Click the clock icon to enter the time display interface

7. The folder

Click the folder icon to enter the folder interface, where you can view relevant information of TF card and USB flash disk.

Set 8.


- 1 » Language: switch between Chinese and English system language, default English system.
- 2) Screensaver: Set, 15 seconds, 30 seconds, 45 seconds, 60 seconds, 90 seconds, off, 6 screensaver modes.
- 3 Dacklight brightness: Set the brightness of level 1-10 display (the larger the number, the brighter the display).
- 4 » Power on and play music: Set up the power on, the remote control power on, touch the button to boot, whether to directly enter the music playing mode.
- 5) Power on volume: Set the volume on power on.
- 6) Set time: Set the current time.
- 7) Bluetooth name: Set the host Bluetooth name (only set number).
- 8) Bluetooth password: Set the Bluetooth pairing password (only set the number).
- 9) Timer: Set the timer on and off function.
- 10) Regular play: Set the function of regular play and turn off.
- 11) Software version: View the current software version information.
- 12) Restore factory Settings: restore factory state.





Host installation instructions

- 1. Screw the support on the 86 cartridge with the support screw. (See Figure 1)
- 2. Screw the wires inside the 86 cassette into the wiring splice of the corresponding function of the host, insert the wiring splice into the terminal post of the host, then put the host into the hardware support, and then push down.(As shown in Figure 2)

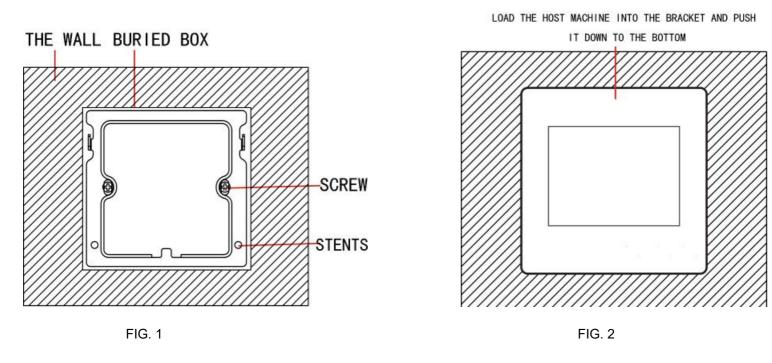

3. Upon completion of installation, turn on the power switch button, and the machine can be started.