

Model: TCI-152C (2-tone chime)

Power Supply:
DC9V or AC Power with adapter

**Package Contents:**

Microphone Basex1
 Gooseneck (42cm).....x1
 Connection Cable (10m).....x1
 AC Power Adapter.....x1
 Foam Filterx1
 User Manual x1

Descriptions:

This desktop microphone has built-in pre-paging chime of 2-tone up at the beginning and post-paging chime of 2-tone down at the end. It is an ideal solution for meetings, conferences, and public address needs.

It features a sophisticated switch ON/OFF to support push-to-lock and push-to-talk, and features a flexible gooseneck, which allows you to angle it to an ideal speaking position, a removable foam pop filter included.

The 10m cable with female XLR end ready for connection with the microphone base, at the other end there is 6.35mm (1/4") plug ready for connection with the amplifier.

The microphone is powered using DC9V battery in the base or by connecting to AC power with an adapter.

 
Specifications:

Model No.:	TCI-152C
Chime:	2-tone chime (up/down)
Capsule Type:	Condenser
Frequency Response:	40Hz-16kHz
Polar Pattern:	Cardioid
Output:	200Ω / Unbalanced
Sensitivity:	-38±2dB
Sound Pick-up Distance:	40cm
Base Dimension (WxDxH):	126x150x39mm
Gooseneck Length:	420mm
Battery Working Time:	18hrs (9V battery)
Power Supply:	DC9V battery or AC110-240V with adapter
Indicator:	Base indicator, Mic. LED
Net Weight:	0.68kg

Operating Instruction:


1. Assemble the microphone

Insert the microphone pole into the microphone base mounting socket in a straight line, put the foam filter

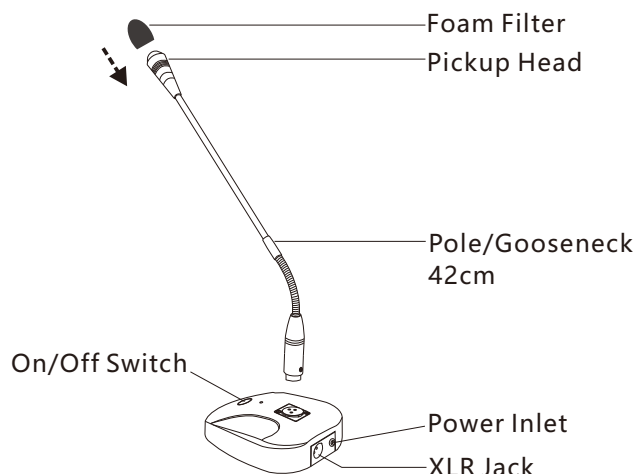


2. Supply the power

 When use the DC9V battery
Put the battery in the way of correct polar.

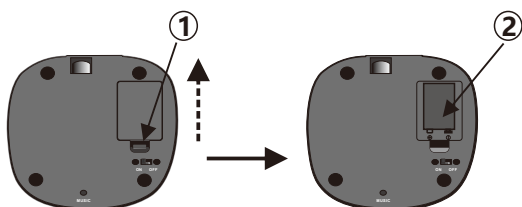

When use AC power

 
Use the provided power adapter to connect with the AC power socket, and the other end to be connected with the microphone through the Power Inlet on the rear panel.

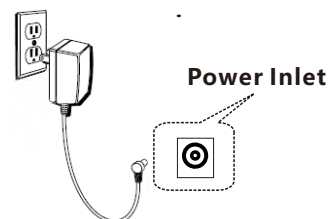

Please do not put the battery if you decide to use the AC power.

3. Connect microphone with audio cable to PA equipments

 Adjust the volume of amplifier to "0" position before turn on the amplifier and microphone, then adjust the volume of amplifier slowly to make sure the microphone achieve the best effect.

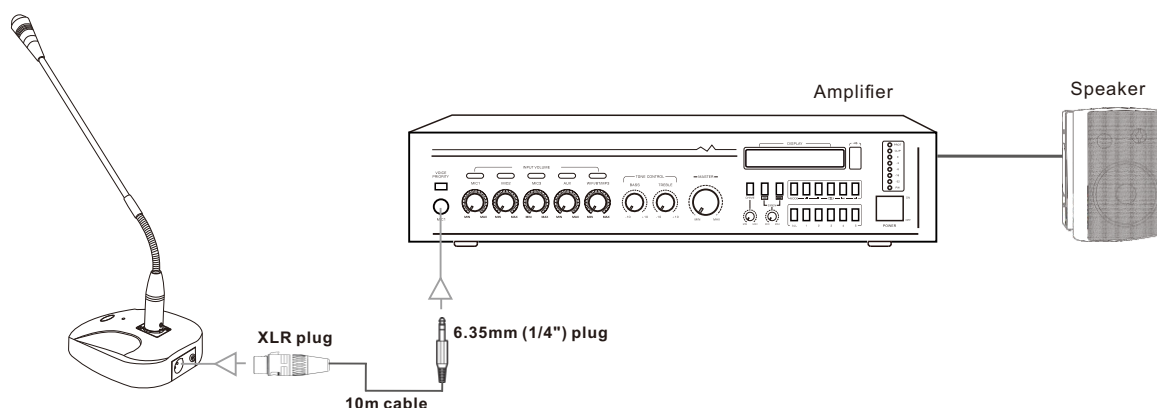

Attentions:

- The speaker will whistle if microphone is too near to the speaker or the volume of the amplifier is too high, take care of keeping certain distance and to limit the volume of the amplifier otherwise damage maybe cause to the amplifier or the speaker.
- Take out the battery if the microphone will not be used for a long time, otherwise the device may be damaged by the spillage of the degenerative battery.